


Note: The frame is shown without the Projection Screen or Swivel Marker Board in these illustrations.


1 Place Overhead Projection Board or Swivel Marker Board face down on a clean, smooth, firm surface. Be careful not to puncture the face of the screen or scratch the board (Figure A).

Figure A

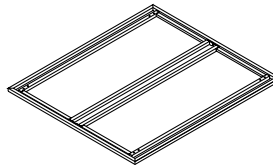


2 Attach bottom brackets to each lower corner of the frame using the provided screws and lockwashers inserted into the pre-drilled holes (Figure B).

Figure B

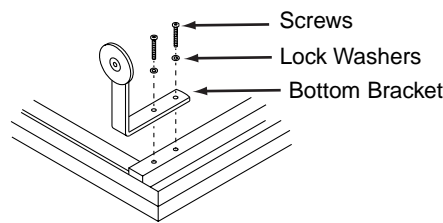

3 Tighten securely using the included Allen Wrench (Figure C).


Figure C

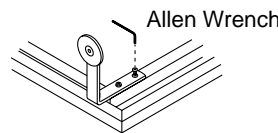

Note: Observe labels and graphics on the front of the screen or board to determine top and bottom.


4 Attach top brackets to each upper corner of the frame using the provided screws and lockwashers inserted into the pre-drilled holes (Figure D).

Figure D

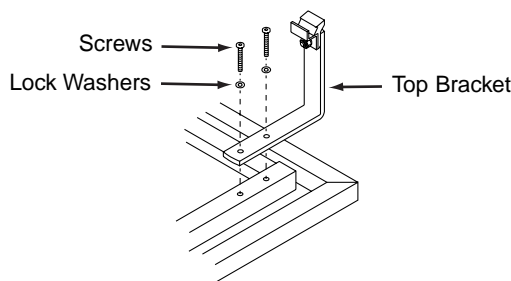

5 Tighten securely using the included Allen Wrench. Board is now ready to be installed into Traxx (Figure E).

 Figure E



TRAXX®

Assembly Instructions

Overhead Projection Board and Swivel Marker Board Brackets

Recommended Tools

- Allen Wrench (included in package contents)

Package Contents

	Qty.
• Top Brackets	2
• Bottom Brackets	2
• Lockwashers	8
• Cap Screws	8
• Allen Wrench	1



Telephone 800.482.1818
 Fax 812.482.8300
www.furniture.kimball.com

Form #AISYTR004-00
 #1469022

Printed in U.S.A
 © 2000 Kimball International, Inc.