

1 Grip Extendable Flip Chart Holder firmly on each side and position in front of Traxx (Figure A).

Figure A


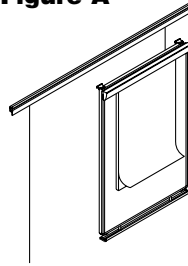


Figure B

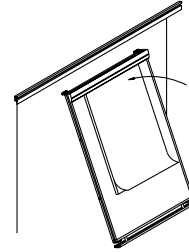

2 Tilt top of Extendable Flip Chart Holder towards Traxx (Figure B).

3 Insert tabs on both top brackets into the center reveal of the Traxx (Figure C).

Figure C


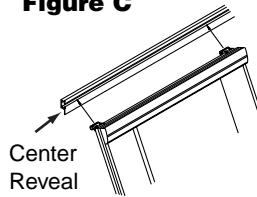


Figure D

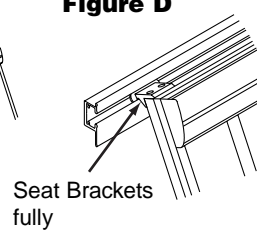

4 Ensure both brackets are fully inserted (Figure D).

5 Allow bottom of Extendable Flip Chart Holder to rotate inward flush against wall (Figure E).

Figure E


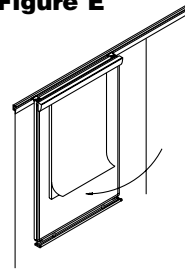


Figure F

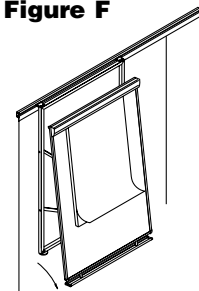

6 To extend Flip Chart Holder from frame, grasp sides of board and gently extend (Figure F).

Note: If Extendable Flip Chart Holder is mounted to upper channel of Traxx, the anti-dislodgement feature will not engage and will prevent the Projection Screen or Marker Swivel boards from passing over the Extendable Flip Chart Holder.

7 To mount paper onto Flip Chart Holder, rotate bottom edge of holder cover upward to open position (Figure G).

Figure G


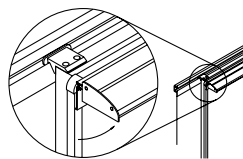


Figure H

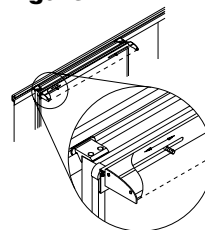

8 Reposition pegs to match holes in chart paper pad (Figure H).

9 Place chart paper pad over pegs (Figure I).

Figure I


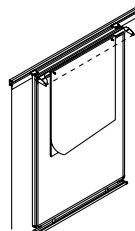


Figure J

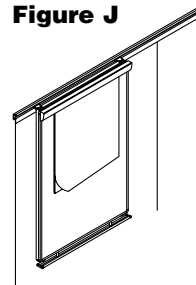

10 Rotate holder cover downward to normal operating position (Figure J).

TRAXX®
Assembly Instructions

Extendable Flip Chart Holder

Recommended Tools

- None

Package Contents

Package Contents	Qty.
• Extendable Flip Chart Holder	1



Telephone 800.482.1818
Fax 812.482.8300
www.furniture.kimball.com

Form #AISYTR007-00
#1469020

Printed in U.S.A
© 2000 Kimball International, Inc.