

Nesting and Non-nesting Tables

Tools Required

- 8mm Metric Allen Wrench
- Phillips Screwdriver #2 Bit, Hardened
- Level

Package Contents

- (2) M10 x 100mm Bolts
- (10) #10 x 1/2" Panhead Phillips Screws
- (1) Support Block
- (1) Release Handle Support Block
- (1) #10 x 5/8" Panhead Phillips Screws

Installation

1. A set of legs arrive in a carton fully assembled. The base must be fully assembled before it is attached to the table top.
Stop: If you are using ganging mechanisms, modesty panels, or electrical systems see 2040755, 2040758, 2040759, and 2040763 instruction sheets before proceeding.
 Make sure the modesty panel holes are facing inward and are aligned with each other. Attach the legs to the crossbar using (2) M10 x 100mm bolts provided. (Figure A).
2. Nesting (flip-top) tables also have a release handle which must be installed prior to attaching the table top. Insert the black prong over the chromed release mechanism and gently rotate the release handle into position. (Figure B).
3. Attach the worksurface support block to the underside of the table using (2) #10 x 1/2" panhead Phillips screws provided (silver in color), and the release handle support block to the underside of the table using (1) #10 x 5/8" panhead Phillips screw provided (black in color). (Figure C).

Figure A

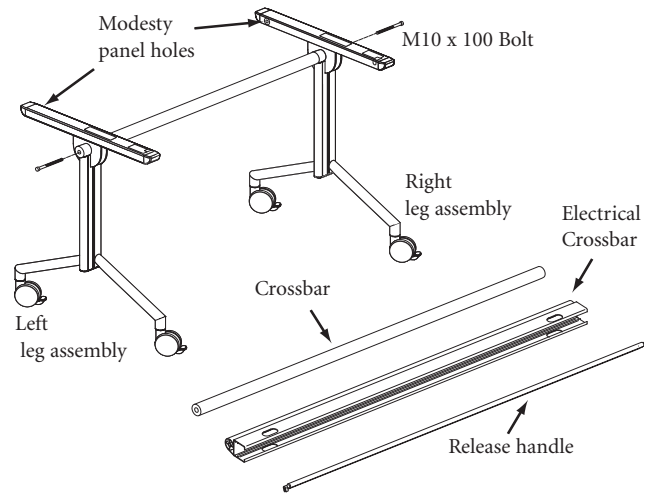


Figure B


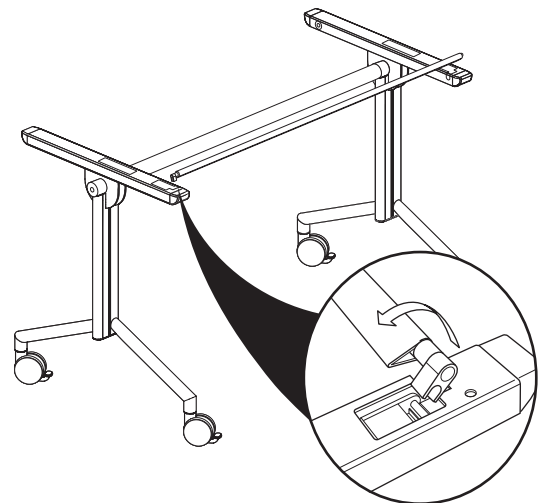


Figure C

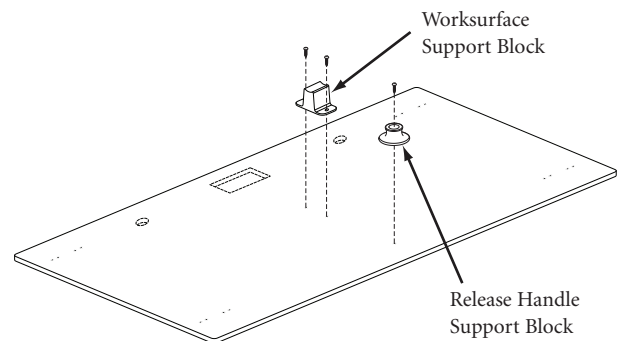

Scenario

Installation (continued)

4. Position the table base assembly onto the underside of the table top.

Important: If worksurface has grommet holes or cord escapes, make sure the release handle is located on the opposite side.

The modesty panel holes must be located on the same side as the grommet holes or cord escapes.

Attach to underside of table top using (8) #10 x 1/2" panhead Phillips screws provided. (Figure D).

5. Release handle is positioned into the inside curve of release handle support block when assembled. (Figure E).
6. If ganging mechanisms are not used, install the black decorative cover cap into the ends of the table base. (Figure F).
7. Tables nest in a straight row. (Figure G).

Figure D

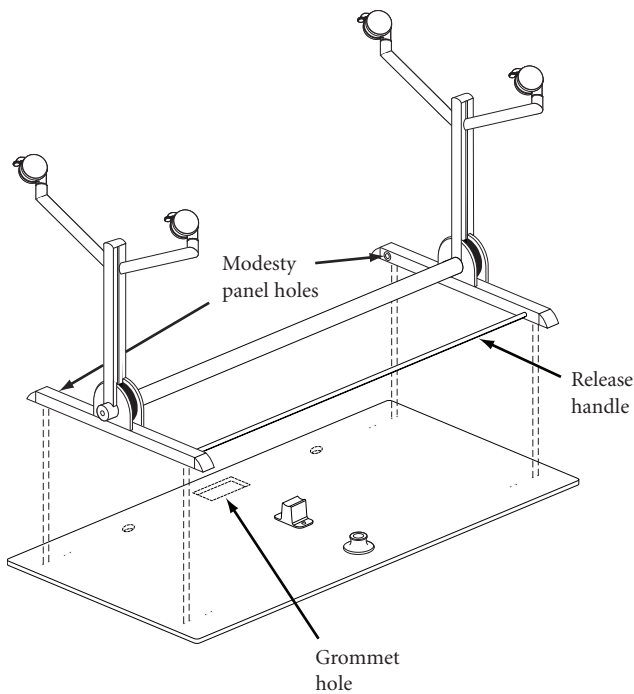


Figure E

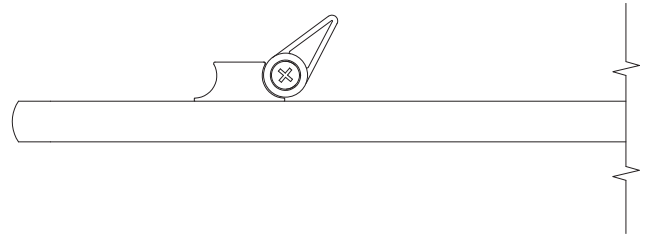


Figure F


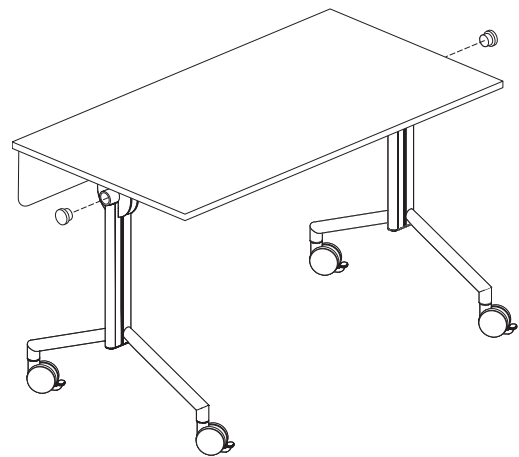


Figure G

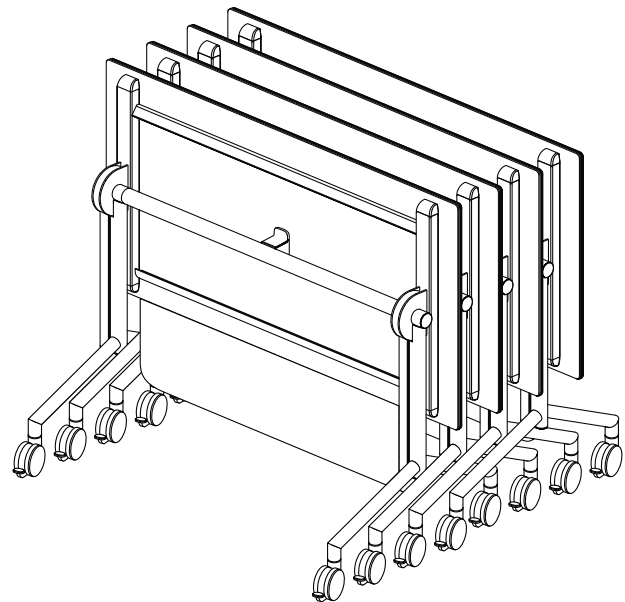

Printed in U.S.A. © 2010 Kimball International, Inc. T 800.482.1818 F 812.482.8300

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Office Customer Service.

Kimball[®]Office