

# Fluent<sup>®</sup>

## Sliding Door

### Tools Required

- Phillips Screwdriver

### Installation

#### Door Alignment

1. Remove all shelves from storage unit.
2. To adjust the door alignment first loosen top rollers adjustment screw. (Figure A).
3. Check alignment of door to edge of end panel on both sides of the cabinet. Adjust bottom roller as needed for alignment.
4. To tighten sliding mechanism, with bottom rollers engaged in the bottom track adjust top rollers so that they engage the top track and tighten adjustment screw. Important: Check that the doors are not too loose or too tight, that they move freely from side to side, and are centered from top to bottom. If not, adjust the alignment of sliding mechanism accordingly. (Figure B).
5. Magnetic catch screws in and out to insure proper margin between the end panel and door. (Figure C).
6. Replace all shelves.

#### Door Removal.

1. Remove all shelves from storage unit.
2. Remove adjustment screw from top rollers. (Figure A).
3. Swing roller on pivot screw until wheel is completely out of the track.
4. Lean top of door out of cabinet, lift off bottom track. (Figure D).

Figure A

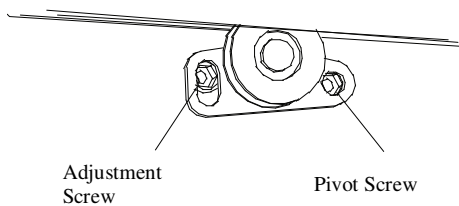


Figure B

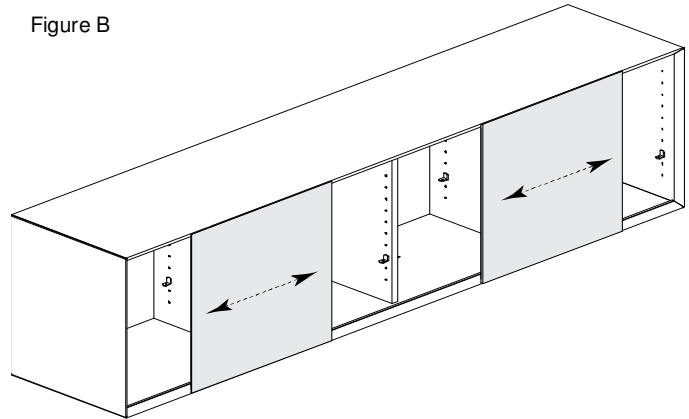


Figure C

Magnet screws in and out for adjustment.

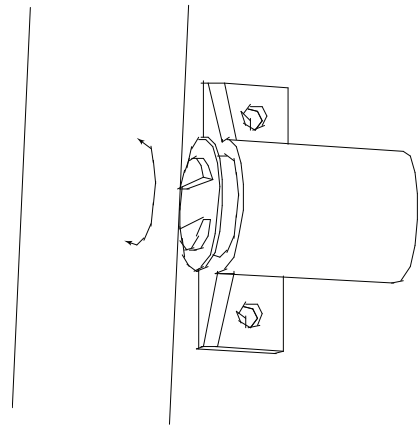


Figure D

