

Attach Storage Units to Returns

Tools Required

- Ratchet
- 4 mm Hex Socket


Hardware Required

- Metal Inserts
- 4 mm Cap Screws

Installation

Important: Screens must be attached to returns before attaching returns to storage units (if applicable).

Figure A

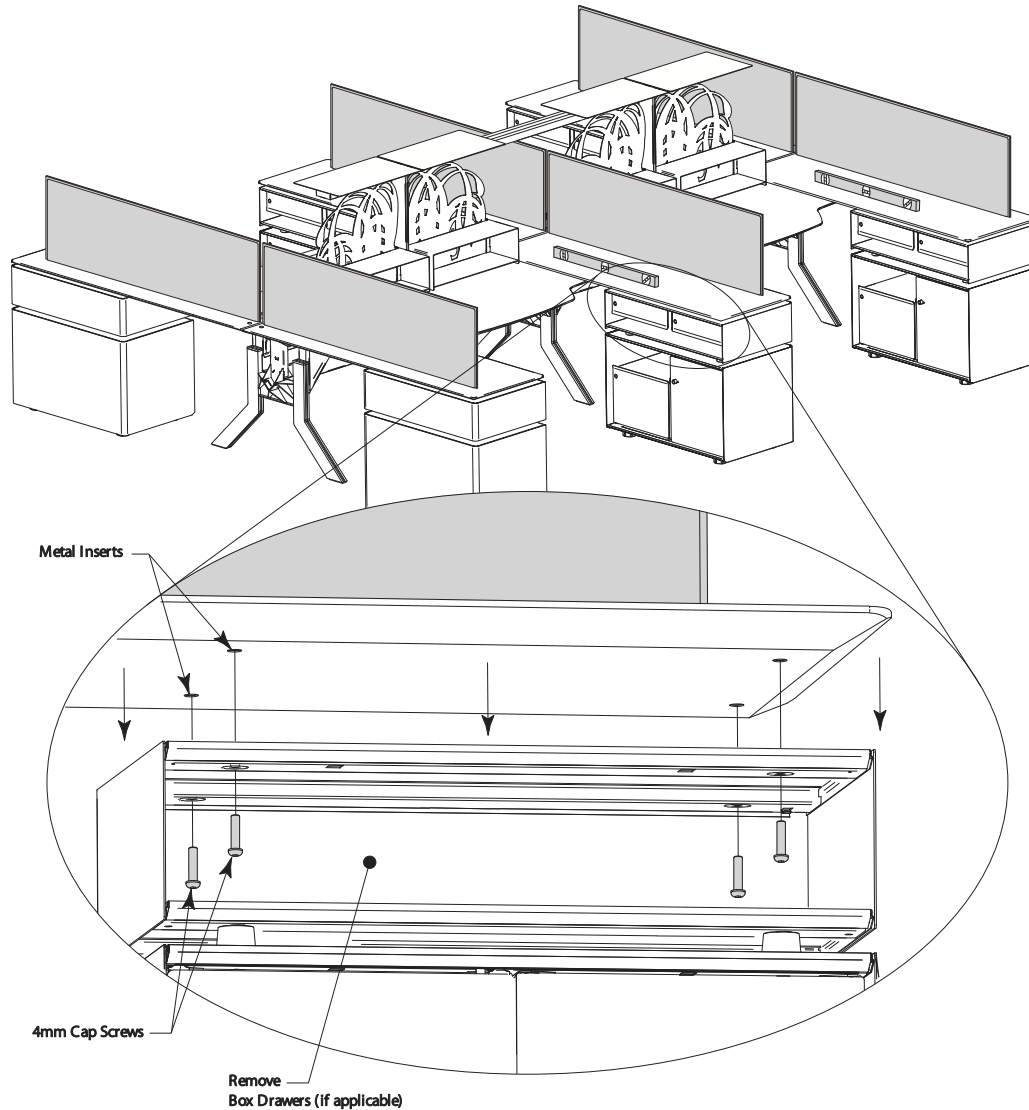

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Office Customer Care.

Kimball®Office


Installation (continued)

Drawer Removal (Figure B)

- Extend the drawer to it's full extension
- Locate the drawer slide release lever, in the approximate location shown, on each side of the drawer.
- Pull the left lever up while simultaneously pushing the right lever down. Pull the drawer straight out until drawer slide mechanism disengages from cabinet member. Do not attempt to remove either half of the slide mechanism from the drawer or cabinet.

Figure B

Drawer
Suspension

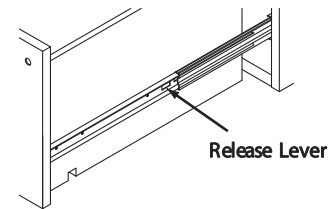

Drawer Replacement (Figure B)

- Extend slide cabinet members.
- Make sure chrome ball bearing member is also forward.
- Carefully align slide drawer members with cabinet members and gently push drawer closed. Check for proper alignment by inspecting drawer front margins for spacing and squareness.