


Fit

Tools Required

- 4mm Allen Wrench 

Step 1

Slide Back into Base

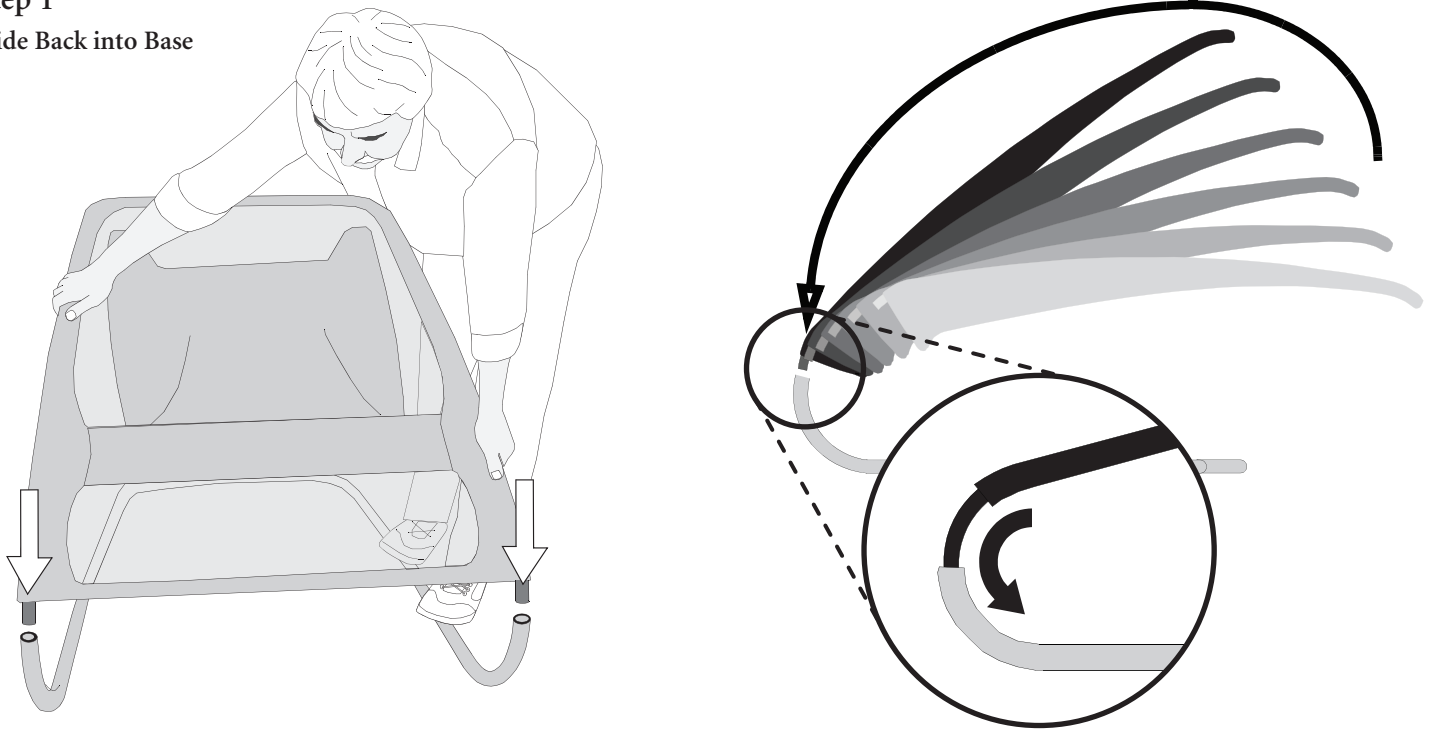


Step 2

Insert Fasteners

Tools Required:

- 4mm Allen Wrench

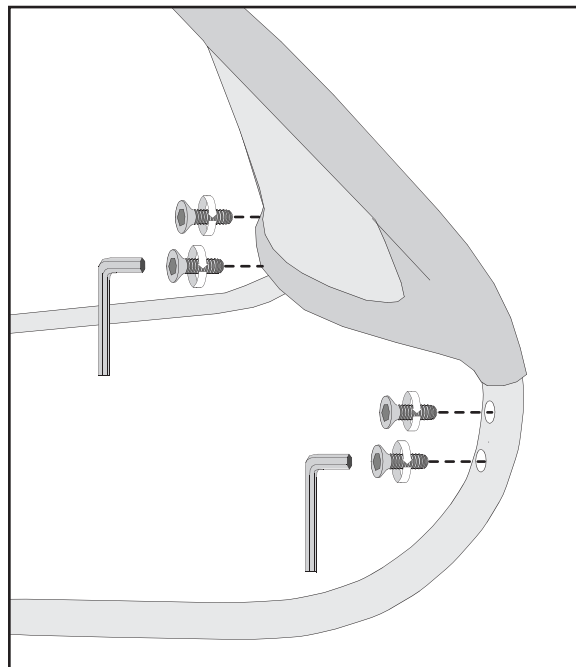

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Office Customer Service.

Kimball[®]Office