

Interworks® EQ

Panels – End Trim (Full and Hi-Lo)

Tools Required


Rubber Mallet (non-marring)

Installation

These instructions apply to installation of:
End Trim required at ends of stackable panels, and at end of panel run.

End Trim

- Rest bottom of trim on: lower panel or alignment channel
- Insert one side of trim into hinge channel
- Compress trim, press into opposite hinge channel

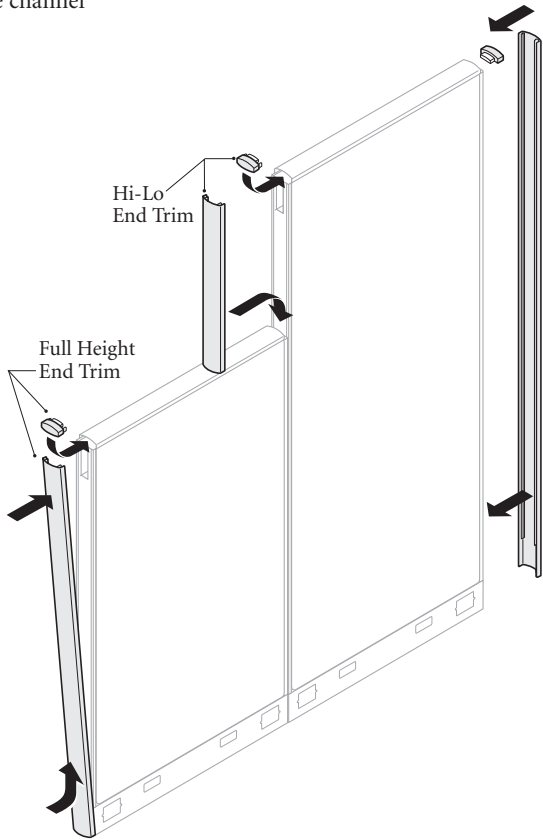

Printed in U.S.A. © 2009 Kimball International, Inc. T 800.482.1818 F 812.482.8300

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Office Customer Service.

Kimball Office