

# Accessories

## Interworks® Panel Tackboard

### Tools Required

- Phillips Screwdriver

### Package Contents

- Tackboard with attached tracks
- 4 Hook Brackets
- 4 ½" Phillips Head Screws

### Installation

**Note:** These instructions provide the basic information to install a panel tackboard onto Interworks panels. (Figure A). Tackboard can be equal to or greater than the width of the panel(s) onto which it will be installed. One person can perform all operations.

**Note:** Panels must be properly installed and level prior to installation of tackboard.

1. Turn tackboard face down. Locate two parallel tracks running the length of the component.
2. Insert one hook bracket into each end of track, hooks to the outside and pointing down. (Figure B).
3. Slide hook brackets into desired location along track to correspond to panel side rails and anchor with four ½" Phillips head screws provided if using full width. (Figure C).
4. Insert into panel side rails at desired location.

Figure A

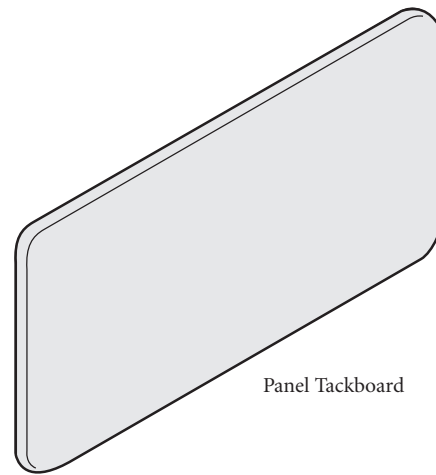


Figure B

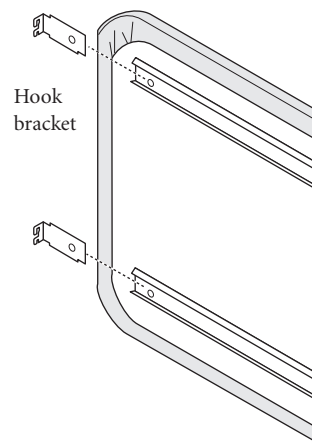


Figure C

