


Note: The flexboard is illustrated in this instruction.


1 Turn Flexboard upside down and place on clean, smooth surface (Figure A).

Figure A

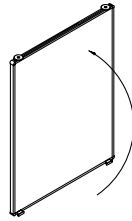

2 Insert the retainers through the large opening in the channel on the bottom of the flexboard and position one above each of the mounting holes in the bottom of the channel (Figure B).

Figure B

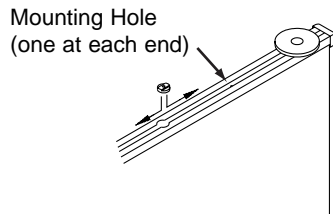

3 Hold the Penholder so the cupped side is facing the board. Insert a mounting screw through one of the mounting holes in the Penholder. Place a spacer over the screw, insert the screw through the retainer and into the mounting hole on the board (Figure C). Use the Allen Wrench to secure the Penholder to the board, but do not fully tighten at this time (Figure D).

Figure C



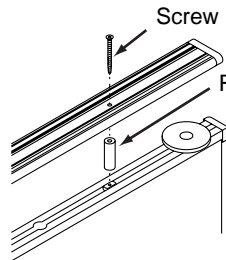


Figure D

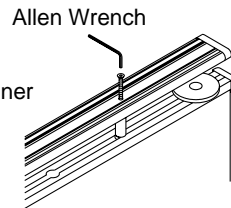


4 Attach the other mounting screw and spacer to other end of the Penholder, ensure the screw passes through the retainer and into the mounting hole on the bottom of the board. Center the pen holder on the board, then use the Allen Wrench to fully tighten both screws on Penholder (Figure E).

Figure E

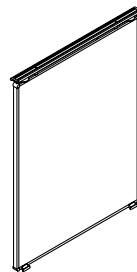

5 Turn flexboard upright (Figure F). The flexboard is ready to be installed on the Traxx.

Figure F

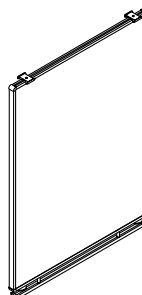

TRAXX®
Assembly Instructions

Penholder Installation

Recommended Tools

- Allen Wrench

Package Contents

	Qty.
• Penholder	1
• Spacers	2
• Retainers	2
• Mounting Screws	2



Telephone 800.482.1818
Fax 812.482.8300
www.furniture.kimball.com

Form #AISYTR006-00
#1469023

Printed in U.S.A.
© 2000 Kimball International, Inc.