

Office Chair Headrest

Tools Required

- Phillips or Slot Screwdriver
(minimum 8" long shaft)

Package Contents

- Skye Headrest

Installation

1. If chair back channel has a cap, carefully slide a screwdriver with a long shaft up inside the back channel and push the cap out. (Figure A).
2. Insert the stem of the headrest into the opening in the back channel and push down firmly to fully seat the headrest. (Figure B).

Figure A

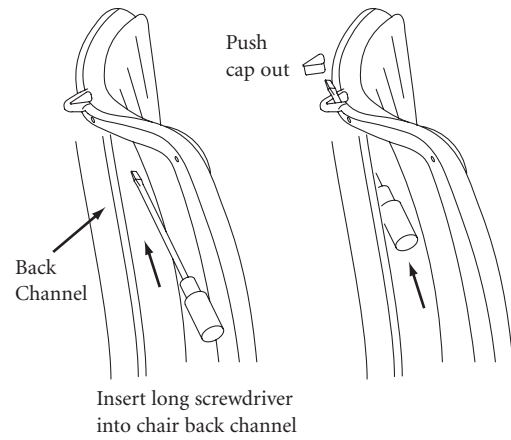


Figure B

