



Panel Mount Markerboard or Tackboard

Tools Required

- Tape Measure
- Level
- Phillips Screwdriver
- Drill

Package Contents

- 1 Markerboard or Tackboard
- 1 Pencil Tray (Markerboard only)
- 2 Cabinet Spacers
- 8 #8 x 5/8" Panhead Phillips Sheet Metal Screws
- 2 End Panel Brackets
- 5 #10 x 1" Truss Head Phillips Sheet Metal Screws (Markerboard only)
- 4 1 1/2" Screws for Marker Tray

Installation

1. Attach pencil tray to front of board using four 1 1/2" screws provided. (Figure A).
2. Attach end panel brackets to top rear side of board, and attach cabinet spacers to bottom rear side of board using 5/8" sheet metal screws provided as shown. Make sure hooks on end panel brackets are pointing down. (Figure B).
3. Hold the board securely in front of desired location in panel run. (Figure C). Tilt top of board slightly toward panel and insert top hooks of both end panel brackets into openings in "J" members between panels. Rotate board to enable bottom hooks of end panel brackets to engage "J" members. Press down firmly to lock into position. (Figure D).

Figure A

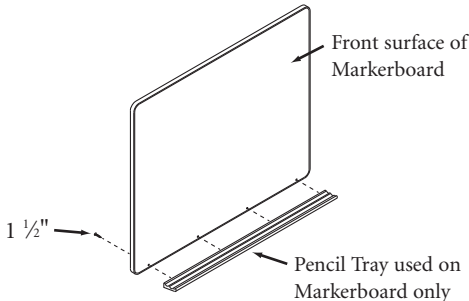


Figure B

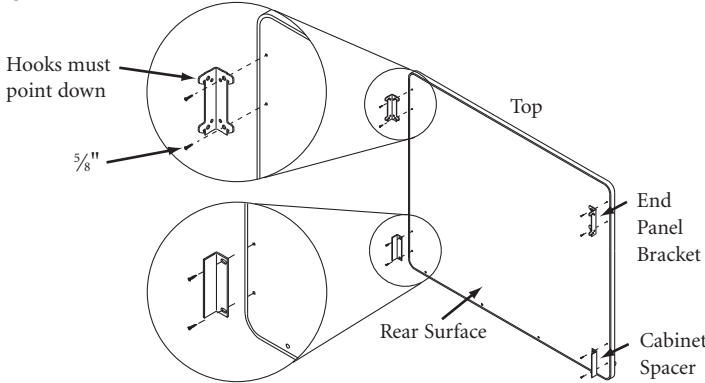


Figure C


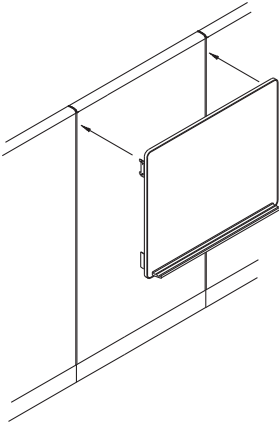


Figure D



Printed in U.S.A. © 2008 Kimball International, Inc. T 800.482.1818 F 812.482.8300

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Office Customer Service.

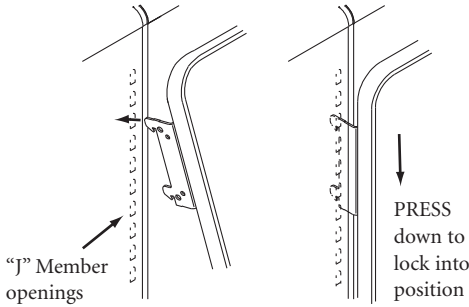