

Innsbruck/Osterley Park

Overhead Cabinet

Tools Required

- Level
- #2 Phillips Head Bit
- Power Screwdriver
- 7/32" Drill Bit

Package Contents

- Tapped Sleeve Connectors
- M4 screws

Description

The overhead cabinet mounts as a suspended unit between two set-on-surface bookcases.

Installation

1. Make sure lower unit is level. Place the set-on-surface bookcase units in the desired location. Align the overhead cabinet flush with the back edges of the adjoining set-on-surface bookcases. (Figure A)
Note: The overhead cabinet cornice frame will be offset 1 1/2" behind the bookcase cornice frames.
2. Using a 7/32" drill bit, bore through a shelf hole from the overhead cabinet into the adjoining bookcase unit. (Figure B)
Note: Holes for adjustable shelves have been pre-bored in a 1" boring pattern into the inside end panel of each cabinet and bookcase.
3. Using the tapped sleeve connector, align and fasten the cabinet to the bookcase using an M4 screw, provided. (Figure C)
4. Repeat steps 2 and 3, installing a minimum of four screws per side panel.
Caution: A suspended cabinet should not be connected to another suspended cabinet. (Figure D)

Figure A

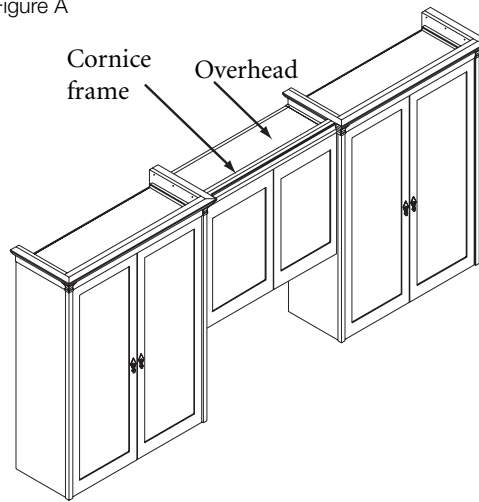


Figure B

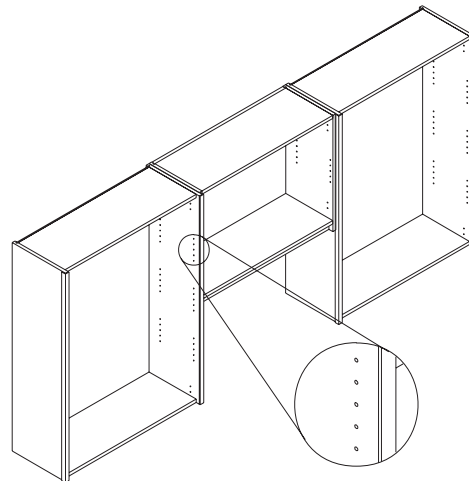


Figure D

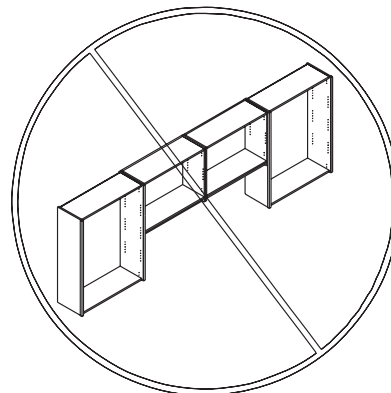


Figure C

