

# Innsbruck/Osterley Park

## Light Switch Kit Installation

### Tools Required

- Tape Measure
- Drill
- $\frac{5}{8}$ " Drill Bit


### Package Contents

- Light Switch

### Installation

1. The light dimmer switch can be located at either end of a wall unit. Bore a  $\frac{5}{8}$ " diameter hole in the top panel from the face side. The hole should be at least 2" from the inside of the end panel and at least 3" back from the front edge. (Figure A).
2. Install light switch and secure in the opening with screws provided.

Figure A

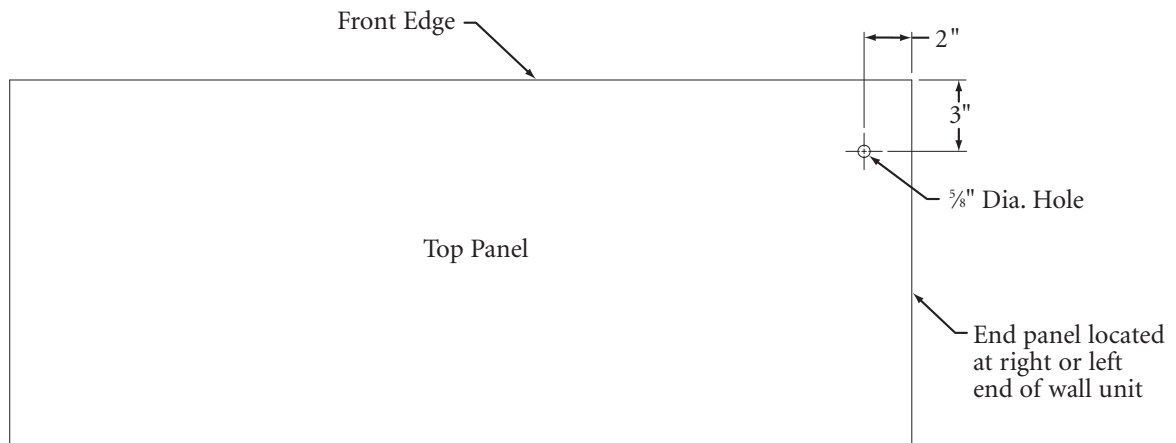

Printed in U.S.A. © 2008 Kimball International, Inc. T 800.482.1818 F 812.482.8300

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Office Customer Service.

Kimball<sup>®</sup>Office