

# Definition<sup>®</sup>

## End Panel (T-Leg)

### Tools Required

- Tape Measure
- #2 Phillips Head Bit
- Screw Gun
- Level

### Hardware Required

- #8 x  $\frac{5}{8}$ " Flathead
- #8 x  $\frac{5}{8}$ " Panhead
- #8 x 1" Flathead
- Bracket

### Installation

1. To assemble the T-leg end panel, attach the brackets to the end panel, then attach brackets to support panel using the #8 x  $\frac{5}{8}$ " flathead screws provided. (Figure A).
2. To install the end panel, place worksurface on a clean, soft surface, underside facing up. The end panel should be located with a margin of  $\frac{5}{64}$ " around the front, side, and back. (Figure B).
3. Secure end panel to worksurface through brackets using screws provided. (Figure C).

Figure A

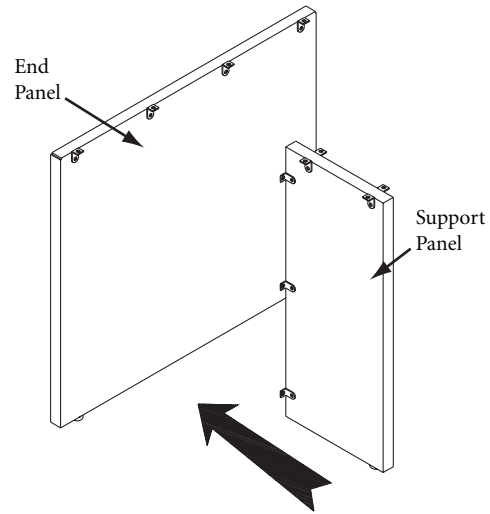


Figure B

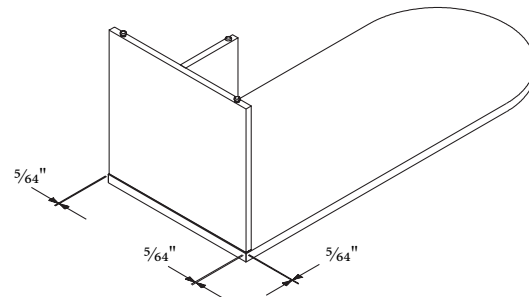


Figure C

