

Definition[®]

Keyhole Top, U Top, and P Top

Tools Required

- Tape Measure
- #2 Phillips Head Bit
- Screw Gun
- Level

Hardware Required

- #8 x $\frac{5}{8}$ " Flathead
- #8 x $\frac{5}{8}$ " Panhead
- #8 x 1" Flathead
- Bracket

Installation

1. Keyhole tops, U tops or P tops can be configured either as work returns or as desking elements. These tops should never be used as freestanding furniture. (Figure A).
2. To assemble the T-leg end panel, attach the brackets to the end panels, then attach brackets to support panel using the #8 x $\frac{5}{8}$ " flathead screws provided. (Figure B).
3. To install the end panel, place worksurface on a clean, soft surface, underside facing up. The end panel should be located with a margin of $\frac{5}{64}$ " around the front, side, and back. (Figure C).

Figure A

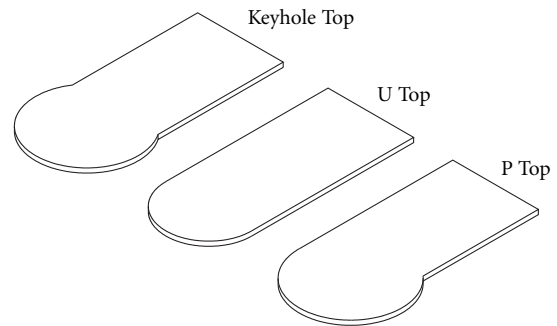


Figure B


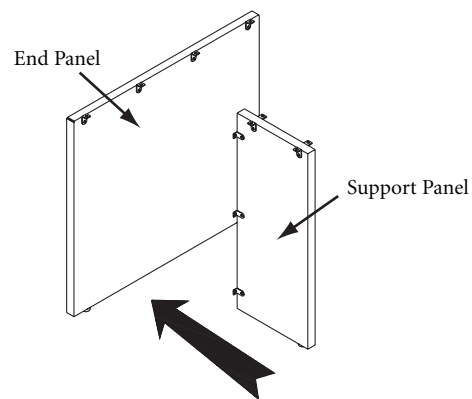


Figure C

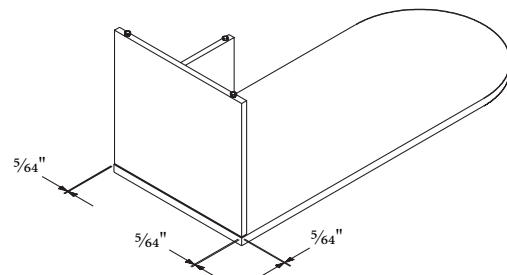

Definition

Installation (continued)

4. Secure end panel to worksurface through bracket using screws provided. (Figure D).
5. For units with modesty panels, position end panel as shown in Figure E. The modesty panel can be positioned in the center of the half cylinder support base or moved flush with either end of the base. Attach the brackets to the end panel and half cylinder base using #8 x $\frac{5}{8}$ " panhead screws prior to attaching the modesty panel. Brackets must be mounted facing inside (toward the user's side) in the kneewell. Attach the modesty panel brackets on the end panel and support base using the #8 x $\frac{5}{8}$ " flathead screws. (Figure E).

Note: If using optional center drawer, modesty panel will need to be flush with the front edge of the half cylinder base to allow clearance.

Figure D

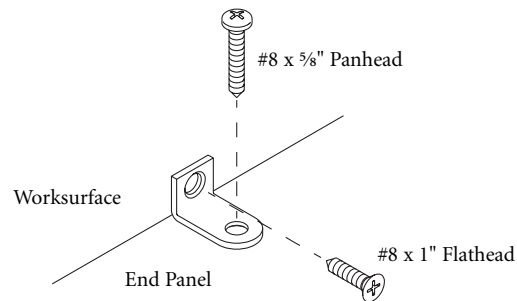


Figure E

