

Definition[®]

Suspended Overhead Storage

Tools Required

- Drill
- #2 Phillips Screwdriver
- 7/32" Drill Bit

Installation

1. A suspended overhead storage unit mounts between two set-on storage units or between a set-on storage unit and a vertical storage unit. Align the units in their desired position. (Figure A).
2. If suspended overhead cabinet is used between two floor standing vertical storage units, you must position a pair of 1/8" spacers (provided) between the suspended overhead and the freestanding unit. Peel off double faced tape and fasten to side panel of suspended storage unit. Attach foam to end panel 1/8" from the front edge of end panel. (Figure B).
3. A suspended unit should not be connected to another suspended unit! (Figure C).

Figure A

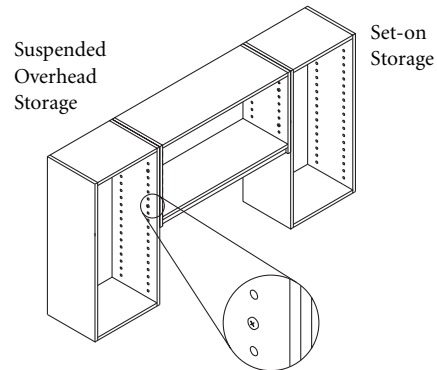


Figure B

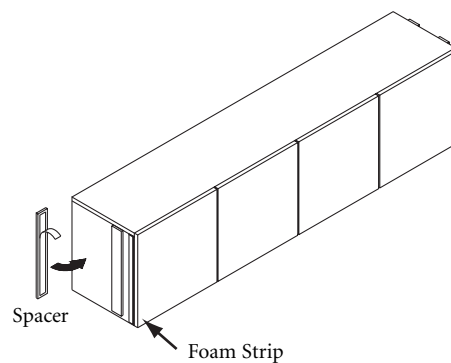


Figure C

