

Definition[®]

TRAXX[®] Mounted Overhead

Tools Required

- None

Installation

1. Overhead cabinets can be hung from Traxx using the Traxx attachment bracket. (Figure A).
2. Insert the hook on top of the bracket into the Traxx at a 15° angle. (Figure B).
3. Pull downward on bracket allowing bracket to hang off the Traxx. Install the remaining brackets required to hang the overhead. 30", 36", 42" and 48" cabinets require two brackets. 60", 66", and 72" cabinets require 4 brackets. (Figure C).
4. Install the overhead by tilting the bottom of the cabinet approximately 15° away from the wall and engaging the cabinet bracket onto the Traxx attachment bracket located on the Traxx. (Figure D).
5. Let the cabinet rest against the spacer block or tiles. Repeat procedure for any additional overhead cabinets.
6. To level the cabinets, loosen the screws on the cabinet bracket and adjust accordingly. Tighten all screws after leveling.

Figure A

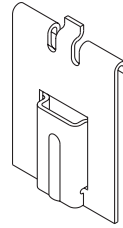


Figure B

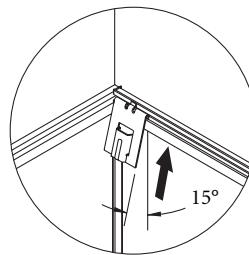


Figure C

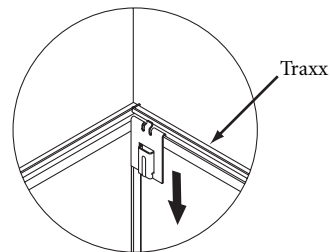


Figure D

