

Definition®

Vertical Storage/Bookcases

Tools Required

- Level
- Metric Hex 5
- Screw Gun
- 7/32" Drill Bit

Package Contents

- M4 screw
- Tapped Sleeve Connector

Installation

1. Vertical Storage Units, Freestanding and Set-on Bookcases can be attached together if desired. (Figure A).
2. Align two units side by side. Using a 7/32" drill bit, bore through shelf hole from one cabinet into the other. Using the tapped sleeve connector, align and fasten to adjacent storage unit using M4 screw provided. (Figure B).

Figure A

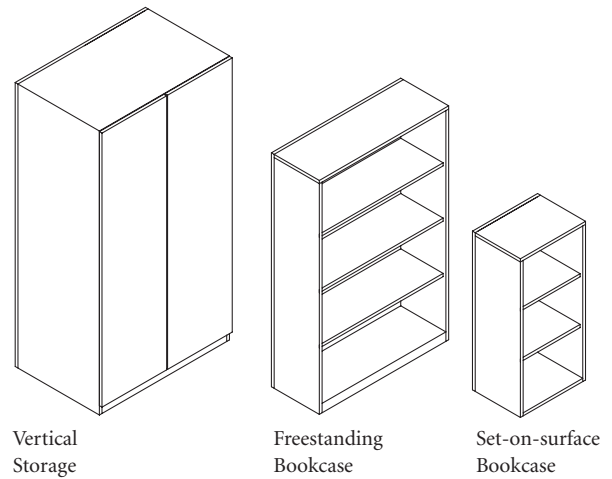


Figure B

