

Transcend™

Suspended Overhead Storage

Tools Required

- Drill
- 7/32" Drill Bit
- #2 Phillips Screwdriver

Installation

1. A suspended overhead storage unit mounts between two set-on storage units or between a set-on storage unit and a vertical storage unit.
2. With main units set in place and level in all directions, place the overhead storage unit between the adjoining storage cabinets. Align the overhead unit with adjoining units and fasten together using the ganging bolts provided, 4 bolts per side. (Figure A).
3. A suspended unit should not be connected to another suspended unit! (Figure B).

Figure A

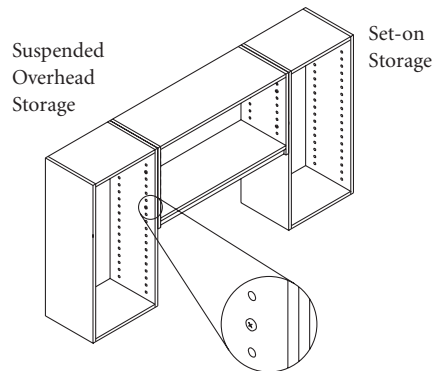


Figure B

