

Array®

## Static “C” Leg Attachment

### Tools Required

- Power Screwdriver

### Package Contents

- 16 #10 x 1¼" Truss Head Screws
- 2 Static “C” Legs

### Installation

1. Turn table upside down and place on solid surface. (Figure A).
2. Place base on table, aligning inside holes in plate with holes 1 and 2 on table. (Figure B).
3. Install screws through base into top. Utilize all holes. Be careful not to over tighten. (Figure C).
4. Repeat Steps 2 and 3 to attach other “C” Leg to table.
5. Carefully turn unit upright. (Figure D).

Figure A

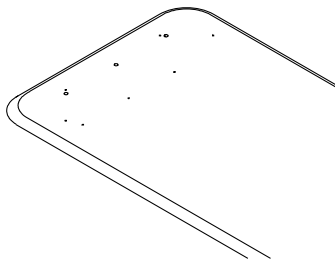


Figure B

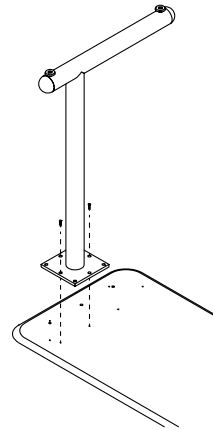


Figure C

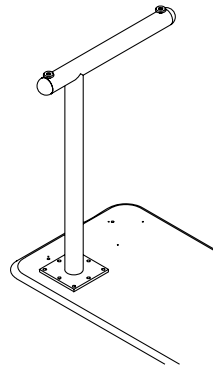


Figure D

