

Array®

Mesh Modesty Panel Attachment

Tools Required

- Power Screwdriver
- Tape Measure or Ruler

Package Contents

- 1 Mesh Modesty Panel (42" or 60" length)
- 2 #10 - 12 x 3/4" Panhead Screws
- 2 Plastic Mounting Clips

Installation

Note: This instruction uses a worksurface with static "C" legs as an example. The mesh modesty panel will attach to any rectangular worksurface regardless of the leg style.

1. Turn worksurface face down on a smooth, solid surface. (Figure A).
2. Place a plastic mounting clip in the center of each exposed portion of the steel bar on the modesty panel. Make sure the wire management flap on the panel is facing up. (Figure B).
3. Center the mesh modesty panel on the worksurface about 3/4" in from the back edge. Make sure the wire management flap on the panel is facing up. (Figure C).
4. Use wood screws to attach plastic mounting clips to worksurface. (Figure D).
5. Carefully turn worksurface upright. (Figure E).

Figure A

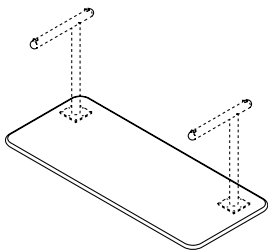


Figure B

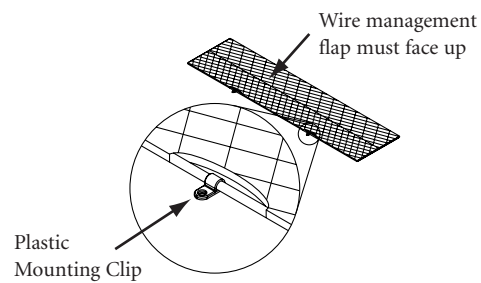


Figure C

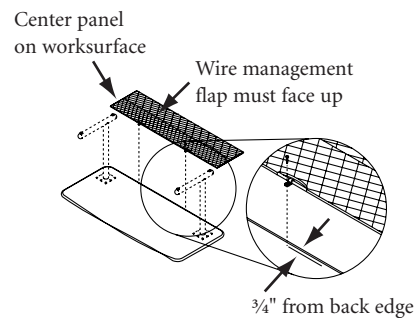


Figure D

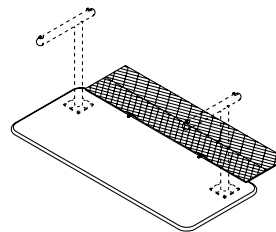


Figure E

