

## Scenario™

## Mobile Markerboard

## Tools Required

- 4mm Metric Allen Wrench
- Soft Rubber Mallet
- Phillips Screwdriver #2 Bit, Hardened

## Package Contents

- (2) M6x55 Panhead Screws
- (2) M6x25 Panhead Screws
- (7) #8 x ½" Panhead Screws
- (2) Markerboard Hanger Hooks
- (2) Paper Attachment Cups
- Hooks

## Installation

1. Attach the outer support legs to the chromed cross-tube using (2) M6x55 panhead screws provided. (Figure A).
2. Attach the inner support legs to the chromed cross-tube using (2) M6x25 panhead screws provided. (Figure B).
3. Using a soft rubber mallet, install the black cap plugs into the ends of the outer support legs. (Figure C).
4. Screw the markerboard hanger hooks to back of markerboard in prebored holes. Attach with (4) #8 x ½" panhead screws provided. (Figure D).
5. The marker tray must be assembled to the back of the markerboard. Attach with (3) #8 x ½" panhead screws provided. (Figure D).
6. Hang the markerboard off the chromed cross-tube by hooking it over the cross-tube. Push the latch into the holes in the outer tube legs to lock the board to the leg frame. (Figure E).
7. Remove protective film from markerboard surface.

Figure A

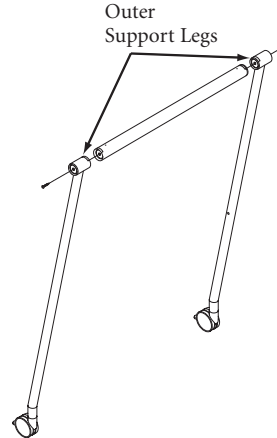


Figure B

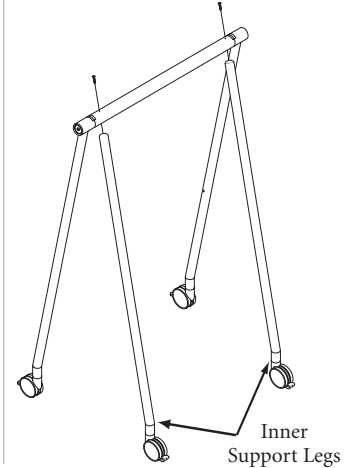


Figure C

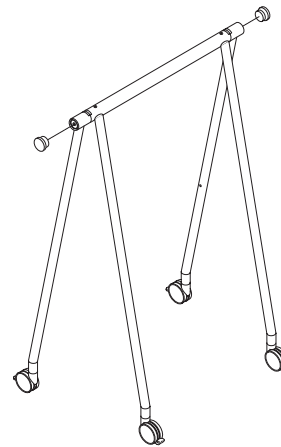


Figure D

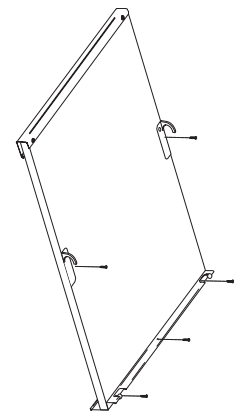


Figure E

