

Footprint®

Worksurface Support Panel, Return Support Panel

Tools Required

- Variable Speed Drill
- #2 Phillips Tip Bit
- Level

Package Contents

- Support Panel
- 3 #10 x 1" Phillips Particleboard Screws


General Information

- These instructions provide the basic information to install a Worksurface Support Panel or Return Support Panel onto any worksurface. (Figure A).


Installation

1. Worksurface support panel includes a filler panel.
Remove filler panel by sliding up and out. (Figure B).
2. If using with gusset bracket, secure gusset bracket to support panel prior to installing to worksurface. (Figure C).
3. If using with modesty panel, secure modesty panel to support panel prior to installing to worksurface. (Figure D).
4. To install directly to surface, secure using three #10 x 1" screws, provided. (Figure E).
5. Reinstall worksurface support panel filler, if applicable. (Figure E).

Figure A

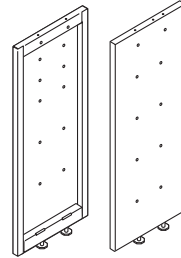Return Support Panel
(no filler panel)

Inside Outside

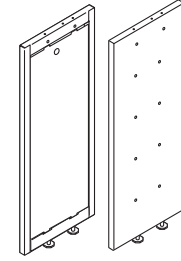Worksurface Support Panel
(includes filler panel)

Outside Inside

Figure B

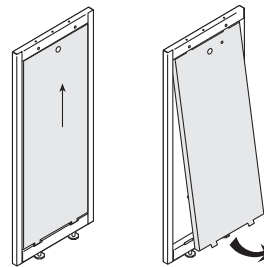


Figure C



Gusset
Bracket

Figure D



Modesty Panel

Figure E

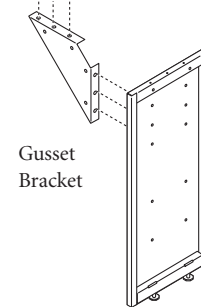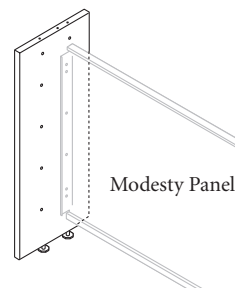