

Universal Products

Cylinder Base

Tools Required

- #2 Phillips Head Bit
- Tape Measure
- Screw Gun
- Level

Hardware Required

- #8 x 5/8" Panhead
- #8 x 1" Flathead

Installation

1. Place top face down on a clean, solid surface or floor. Position base on top so that it is centered and there is an equal distance from the base to the edge of the top all around. (Figure A).
2. Attach base to top as shown using six (6) #8 x 1" flathead screws and six (6) #8 x 5/8" panhead screws provided. (Figure B).
3. Carefully turn table right side up. Level unit by extending the adjustable glides (turn counterclockwise), located in the cylinder base bottom panel, as required. (Figure C).

Figure A

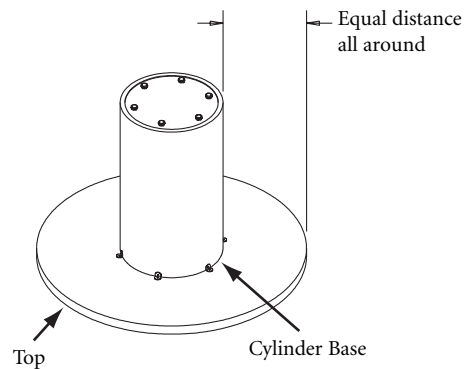


Figure B

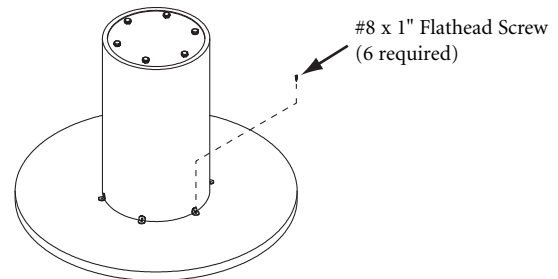


Figure C

