


These instructions provide the basic information for replacing damaged or worn rollers on flexboards.


1 Invert Flexboard to expose rollers (Figure A).

Figure A

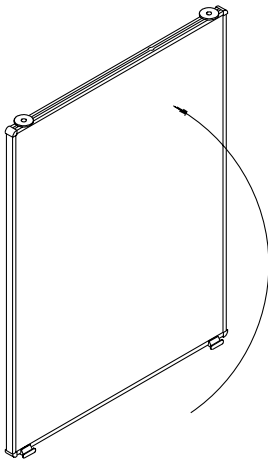


2 Drill out roller rivet using 4mm bit (Figure B). Make sure all traces of rivet are removed.

Figure B

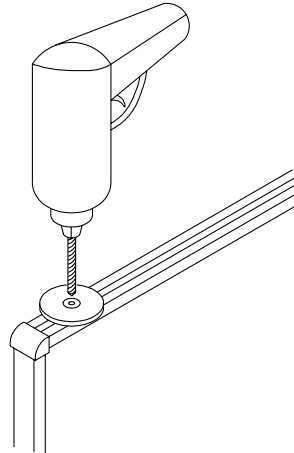

3 Insert mounting screw into replacement parts (roller, spacer, washing and bushing). Screw this assembly into drilled out hole in the flexboard channel reveal. Do not over-tighten (Figure C).

Figure C

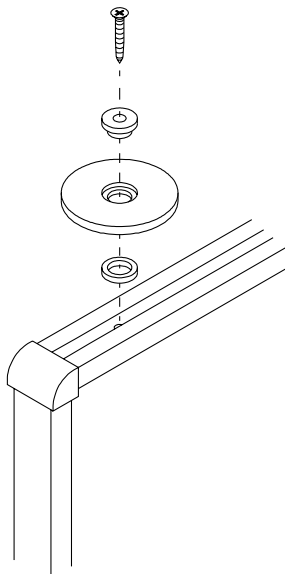

TRAXX®
Assembly Instructions

Flexboard Roller Replacement

Recommended Tools

- Power Drill
- 4mm Drill Bit
- Phillips Screwdriver

Package Contents

	Qty.
• Replacement Roller	1
• Washer/Spacer	1
• Mounting Screw	1
• Bushing	1



Telephone 800.482.1818
Fax 812.482.8300
www.furniture.kimball.com

Form #AISYTR011-00
#1469025

Printed in U.S.A
© 2000 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Customer Care Teams.